



10mm  
DRYWALL

STEP1

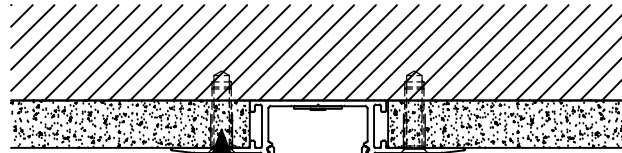

SCREW

STEP2

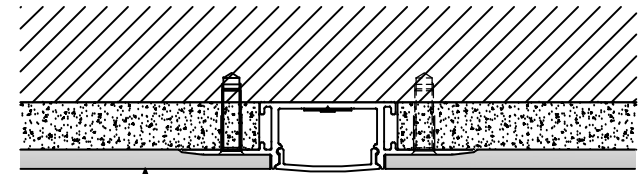

PLASTER

STEP3